Fitment	Part Number
Nissan Pathfinder R53 2021 on	GS45-064 LH / RH


Install Instructions

NOTE – Installation is always recommended by a competent technician. Failure to properly install may result in reservoir fouling on components and voiding warranty.

When assembling the front struts, transfer the foam bump stop from the OEM strut. This is required for proper fitment. Failure to do so may result in rattling, clunking, and premature wear.



If your vehicle has a V-shaped notch on the brake line mount, please proceed with grinding a matching notch on our struts. Once finished, please touch up the area with black paint.

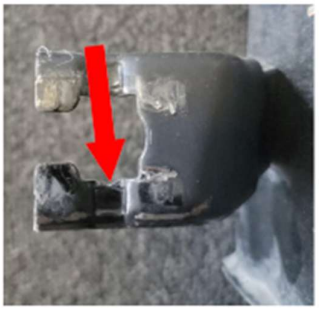

Strut Seat Height is to be measured from the lower edge of the strut to the coil seat.
-309mm / 12.15” (Stock Load)
-314mm / 12.38” (150lb Load)

