
FORD F150




ENSURE LOWER LEG IS TIGHT WITH HIGH-STRENGTH LOCTITE. TIGHTEN BOTH LOCKING GRUB SCREWS

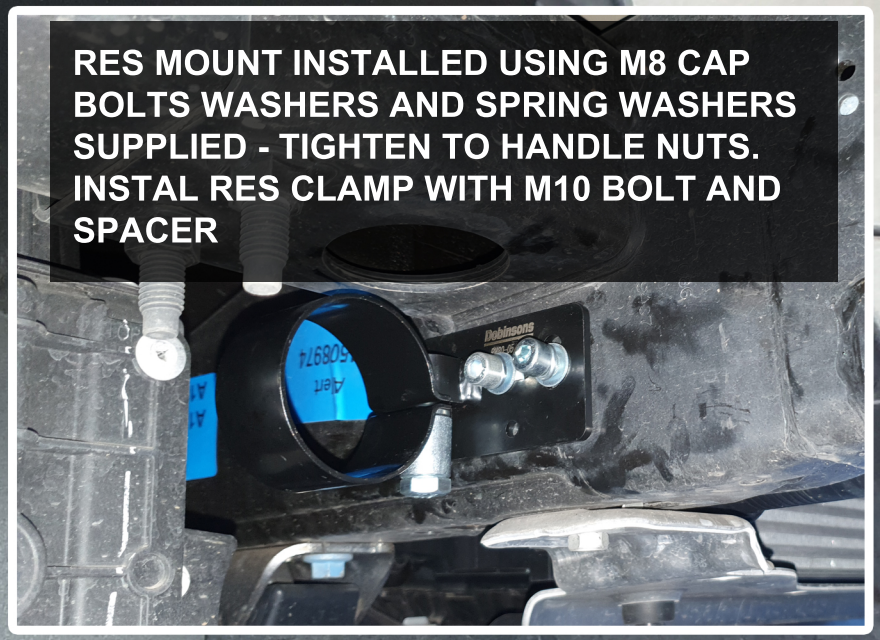

RES MOUNT INSTALLED USING M8 CAP BOLTS WASHERS AND SPRING WASHERS SUPPLIED - TIGHTEN TO HANDLE NUTS. INSTAL RES CLAMP WITH M10 BOLT AND SPACER

HOSE CLAMP PROTECTOR

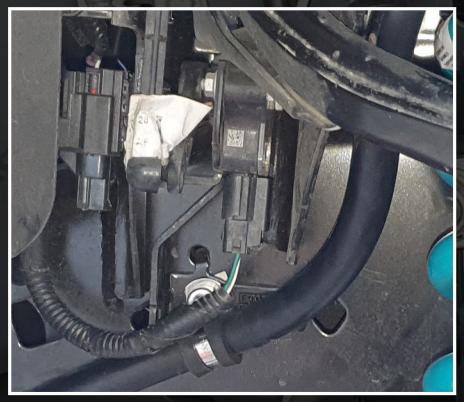

LEFT SIDE USE SUPPLIED BOLT INTO EXISTING THREADED HOLE.
RIGHT SIDE - TAP HOLE 8 X 1.25MM FOR P-CLAMP

HANDLE NUTS IN CHASSIS FOR RES MOUNT



PUSH BUMP STOP DOWN ON WASHER TO PREVENT RATTLING