
MRA59-A222 Reservoir Fitting Instructions RM59-062

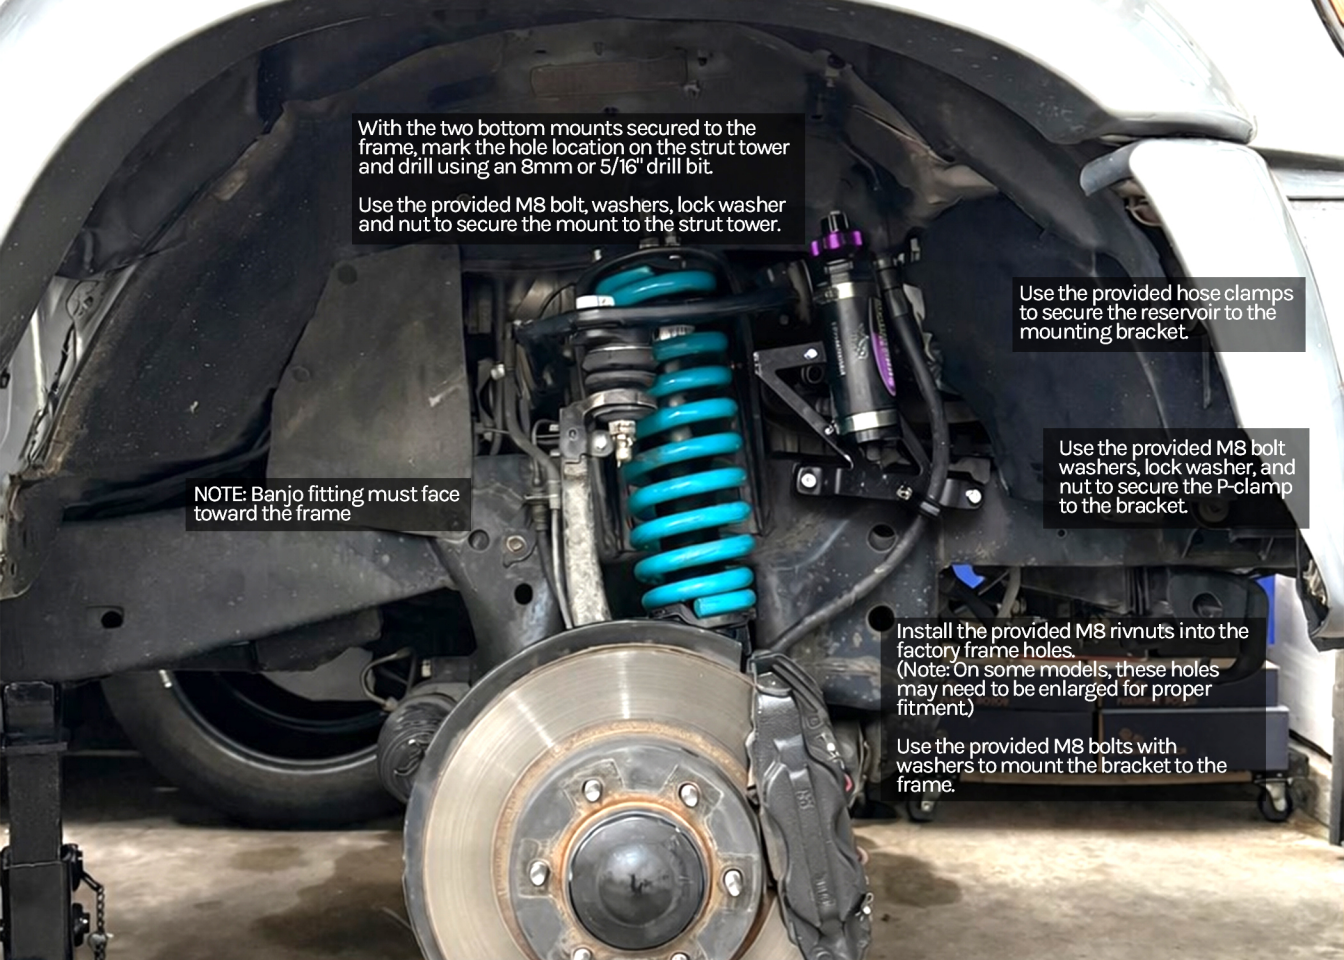


With the two bottom mounts secured to the frame, mark the hole location on the strut tower and drill using an 8mm or 5/16" drill bit.
Use the provided M8 bolt, washers, lock washer and nut to secure the mount to the strut tower.
Use the provided hose clamps to secure the reservoir to the mounting bracket.
Use the provided M8 bolt washers, lock washer, and nut to secure the P-clamp to the bracket.
NOTE: Banjo fitting must face toward the frame
Install the provided M8 rivnuts into the factory frame holes.
(Note: On some models, these holes may need to be enlarged for proper fitment.)
Use the provided M8 bolts with washers to mount the bracket to the frame.