| Fitment | Part Number |
|---|---|
| Toyota Tacoma 2024+ | RM59-063 |


# ***Install Instructions***

***NOTE – Installation is always recommended by a competent technician. Failure to properly install may result in reservoir fouling on components and voiding warranty.***




## Instructions

1. If equipped with piggyback reservoir mounts, remove them prior to installation.
2. Remove the plastic frame hole cover (shown below) to access the mounting location.

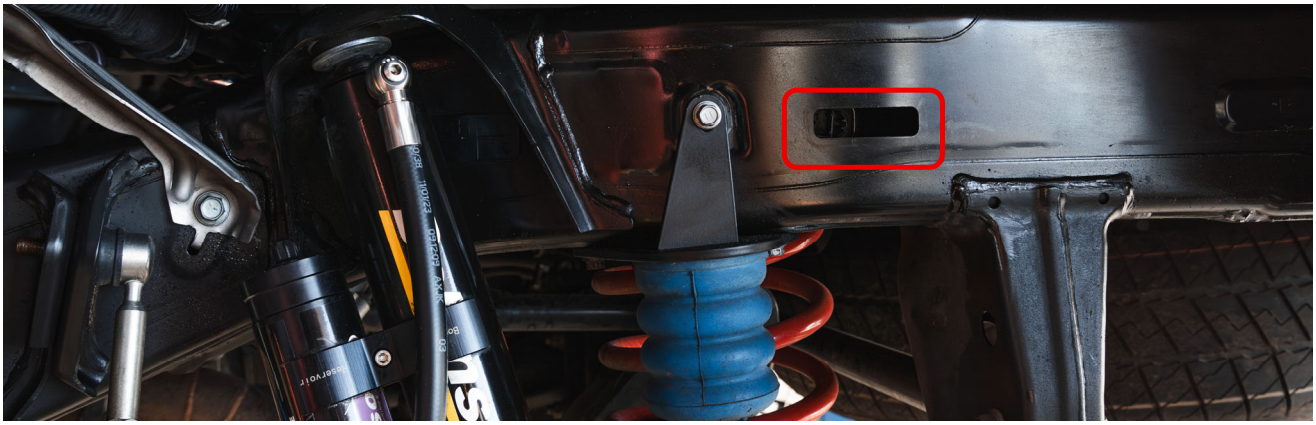

3. Install the remote reservoir bracket using the captured nut plate:
    1. Loosen the captured nut plate—do not remove it from the bracket.
    2. Insert the nut plate from top to bottom through the chassis opening.
    3. Rotate the plate and slide it upward until it hooks securely onto the backside of the chassis.
    4. Ensure the bracket is properly seated before tightening hardware.

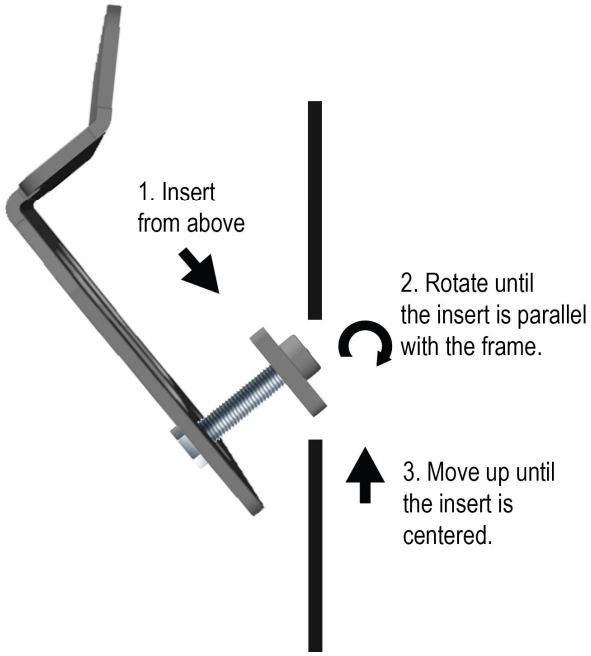

4. Install the supplied hose protectors at the point where the reservoir hose contacts the edge of the shock mount to prevent abrasion.
5. Check all clearances after installation. The reference image below shows fitment with 37" tires on a -12 offset wheel.
6. If necessary, rotate the reservoir to ensure adequate clearance and prevent contact with the reservoir banjo fitting.

