


# TOYOTA TUNDRA 3RD GEN

## DRIVER SIDE

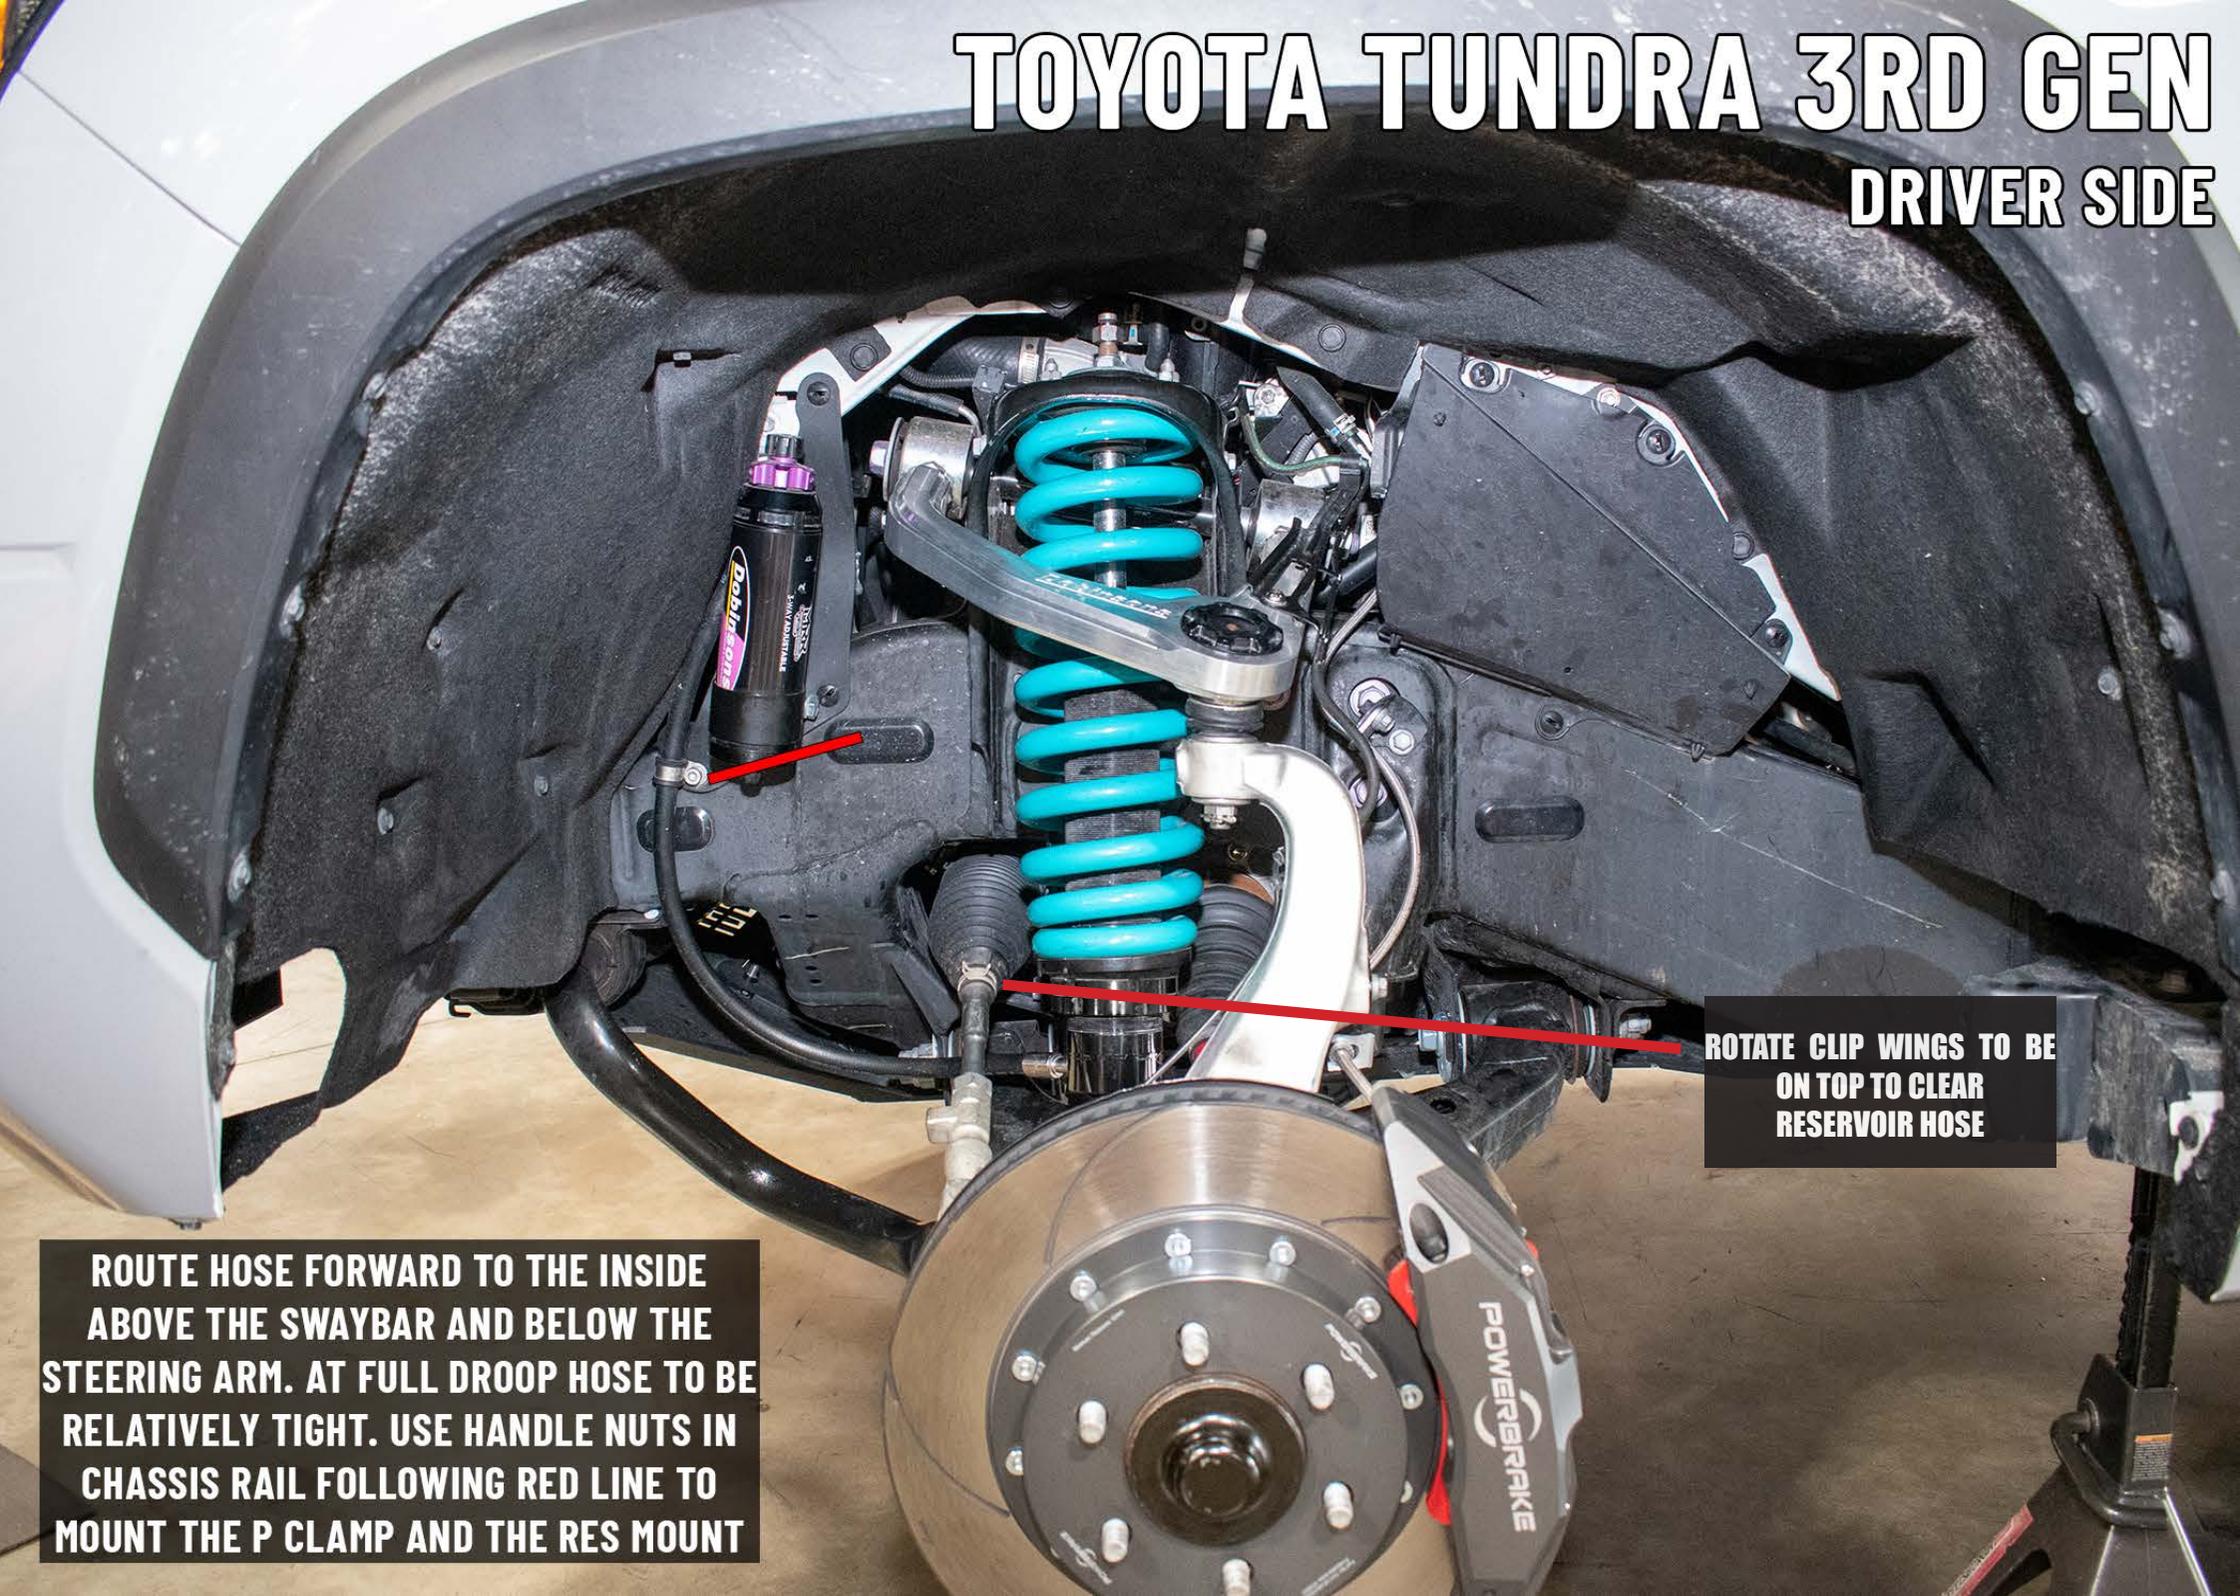


**ROUTE HOSE FORWARD TO THE INSIDE ABOVE THE SWAYBAR AND BELOW THE STEERING ARM. AT FULL DROOP HOSE TO BE RELATIVELY TIGHT. USE HANDLE NUTS IN CHASSIS RAIL FOLLOWING RED LINE TO MOUNT THE P CLAMP AND THE RES MOUNT**

**ROTATE CLIP WINGS TO BE ON TOP TO CLEAR RESERVOIR HOSE**

# TOYOTA TUNDRA 3RD GEN

## PASSENGER SIDE

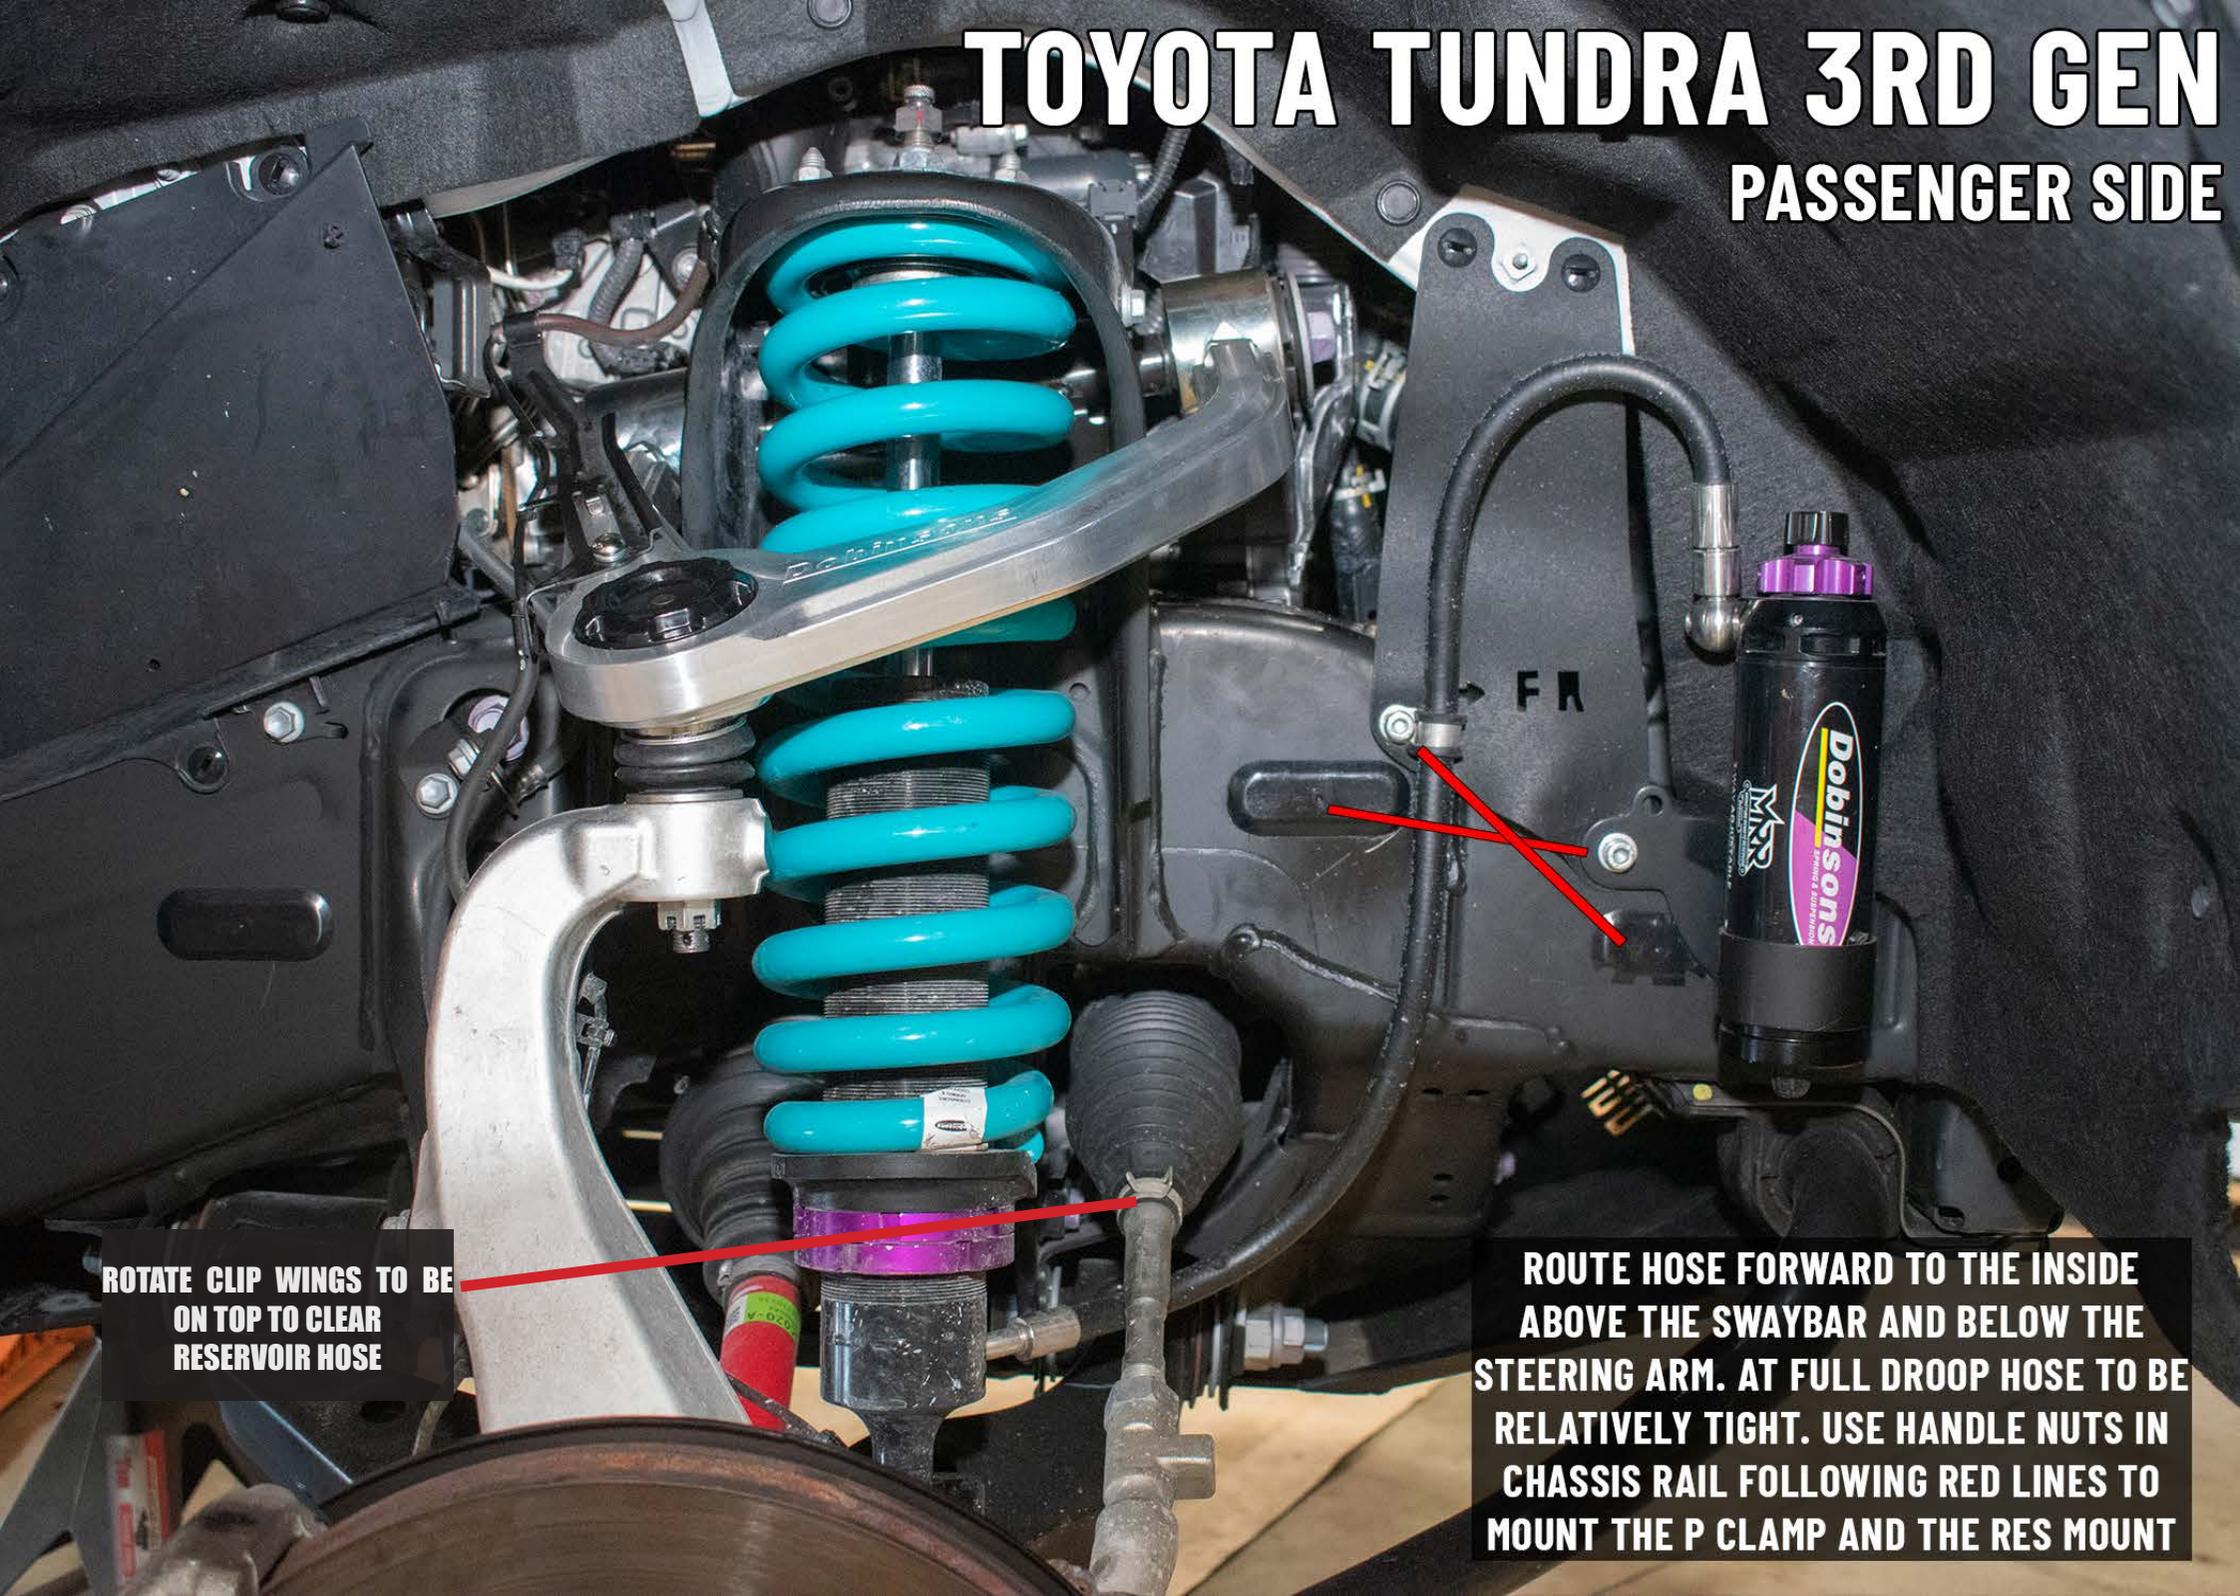

**ROTATE CLIP WINGS TO BE ON TOP TO CLEAR RESERVOIR HOSE**

**ROUTE HOSE FORWARD TO THE INSIDE ABOVE THE SWAYBAR AND BELOW THE STEERING ARM. AT FULL DROOP HOSE TO BE RELATIVELY TIGHT. USE HANDLE NUTS IN CHASSIS RAIL FOLLOWING RED LINES TO MOUNT THE P CLAMP AND THE RES MOUNT**